


User Guide ASSA ABLOY SENSE

1	2	3:	4	5
Choose a free locker. Either a locker with an open door or a lock where the thumbturn is pointing right or left.	Turn the thumbturn into locked position.	To lock: Present any compatible card. The lock confirms being locked by 3 red flashes.	To open: Present the card used to lock. The lock confirms by 3 green signals and opens.	Turn the thumbturn into open position.

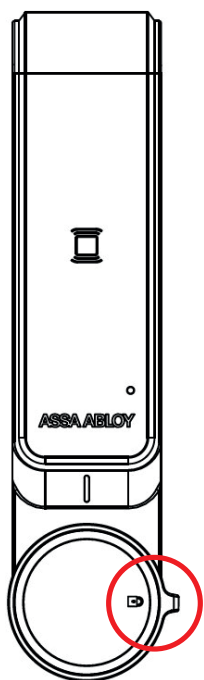

ASSA ABLOY